

STANDARD TV BED

DOUBLE, KING AND SUPER KING SIZE

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction. Carefully open the pack supplied and check the contents against the parts and fittings check list.

 
Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

Please ensure that the packaging is disposed of in a safe environmentally friendly way.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children during assembly, to avoid the danger of choking.

IMPORTANT: BEFORE STARTING TO ASSEMBLE THE BED - PLEASE READ THESE INSTRUCTIONS CAREFULLY.

Parts Identification

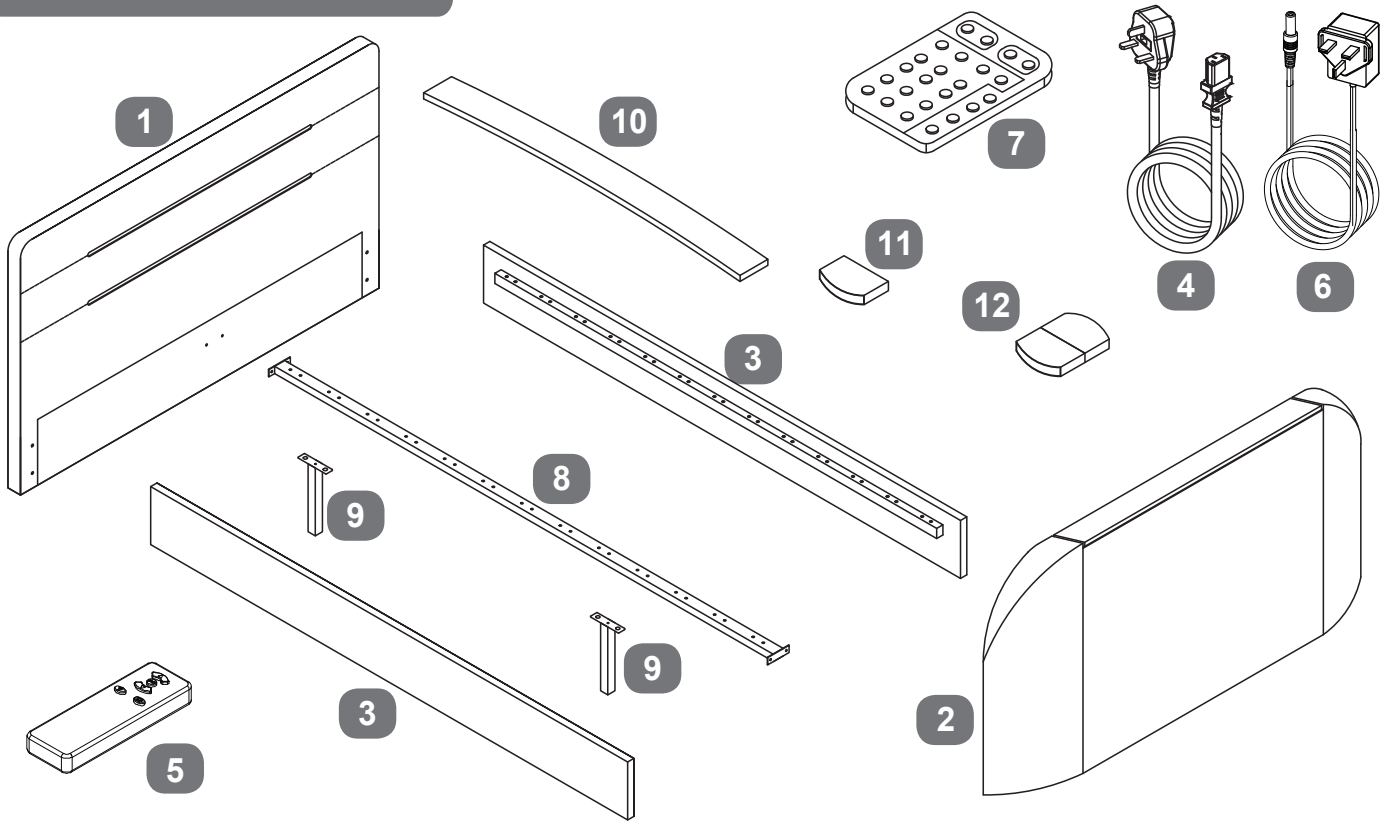
 







Parts Checklist

Ref.	Description	Qty	Packed in Box	Ref.	Description	Qty	Packed in Box
1	Headboard	1	1	7	Remote control for LED	1	3
2	Footboard	1	3	8	Centre Support Bar	1/2	2
3	Side Rails	2	2	9	Centre Support Legs	2/4	3
4	Main Power Lead - 3.5mt	1	3	10	Wooden Slats	28/30/45	2
5	Remote control for TV Lift	1	3	11	Single Plastic Caps	28/30/30	3
6	Power Lead for LED	1	3	12	Double Plastic Caps	14/15/30	3




HARDWARE NEEDED FOR BED ASSEMBLY


 
Fittings Checklist

Code	Description		Qty		Code	Description		Qty
A	Bolt sets (M8x20mm)		Double & King x16 Super King x24		E	Cable ties		x3
B	Bolt sets (M8x30mm)		x8		K	Angle Bracket - LH		x2
C	Allen Key for M8 bolts		x1		L	Angle Bracket - RH		x2
D	Cable clips		x3					


Hardware Pack for TV Installation

   Choose a suitable set of hardware

  a) Bolt sets M8 x 25mm  Counter-Sunk Screw sets (M6x12mm)  Counter-Sunk screw sets (M4x12mm) 

b)  Allen Key (2.5mm)  Allen Key (4mm)

 Additional Tools Required

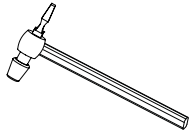

General Hints & Tips



Please retain your assembly instruction and tools provided for future use. Periodically check that all bolts are still tight.

Care & Maintenance

 





In the unlikely event of missing or damaged parts, please contact your retailer. Please have this guide at hand quoting the part code reference numbers shown when requesting spare or replacement parts.



Assembly requires two persons.

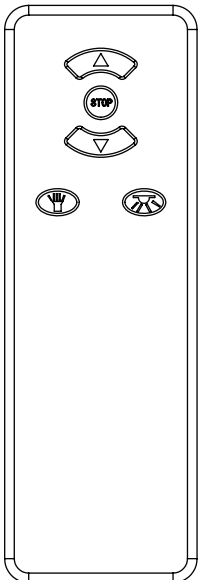


Approximate time to assemble this product

		Press once and TV will rise to it's upper working position. Power to the TV will be connected automatically
		Press once and TV Lift will stop.
		Press once and TV will go down - as soon as the lower resting position is reached power to the TV is switched off to prevent it overheating.
		Torch
		Code Matching
	<p>Code Matching (pairing): occasionally pairing is lost, perhaps due to atmospheric conditions, To re-pair - press and hold the code matching button whilst connecting the power by plugging the mains cable into the control box of the TV lift on the base of the footboard. Continue to press the button for another 5 seconds then press the up or down button to successfully match the code.</p> <p>Regularly check the batteries and if necessary re-place them - x3 pcs AAA size.</p>	

Bed Assembly


Stage
1

 x2

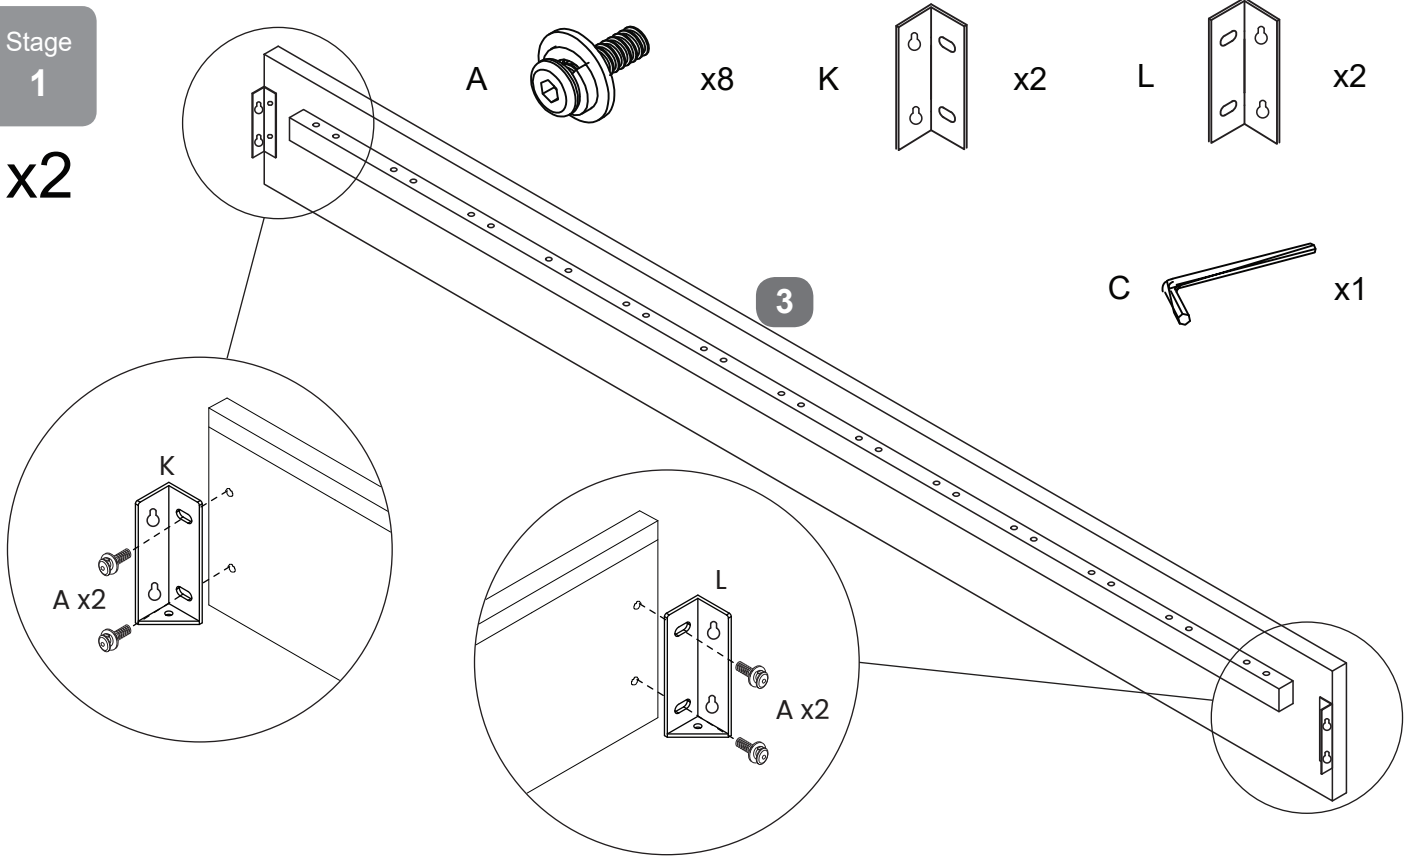


Stage
2

 
2

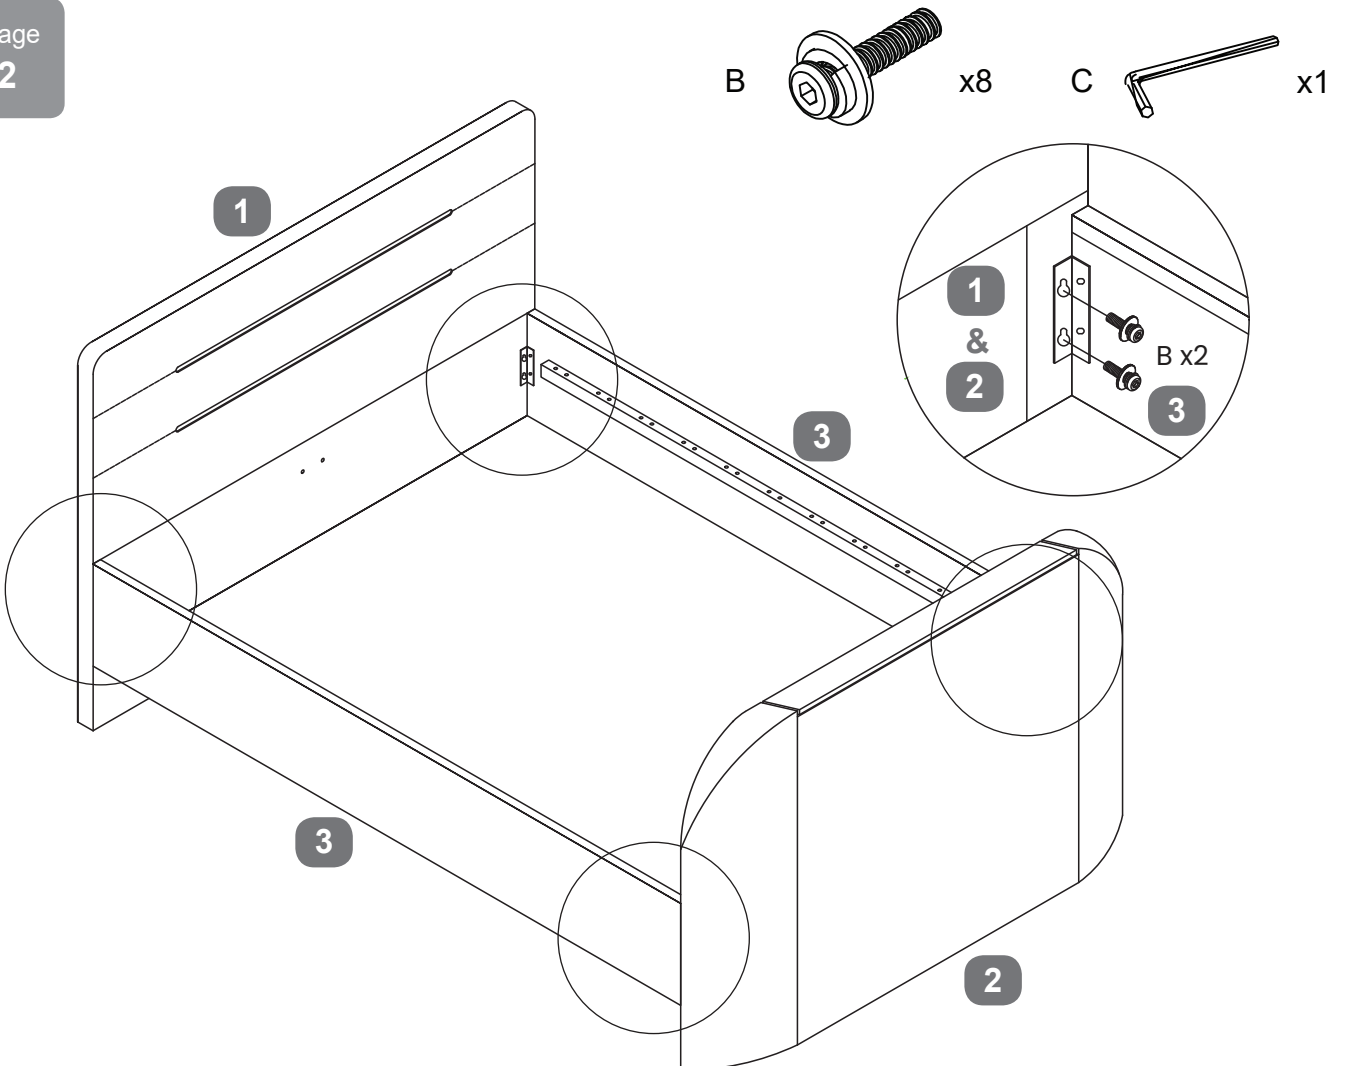

Stage
3


DOUBLE & KING x1
SUPER KING x2





 
A  DOUBLE & KING x4
SUPER KING x8

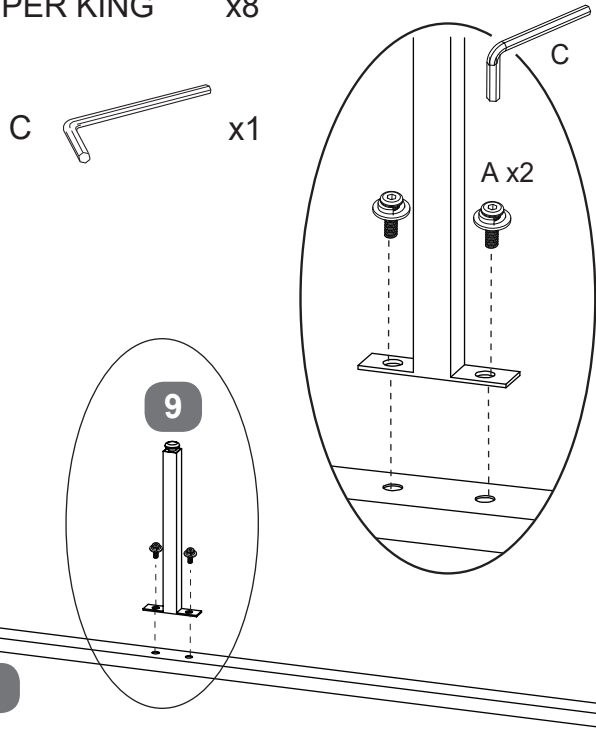

Stage
4


DOUBLE & KING

     A  DOUBLE & KING x4
SUPER KING x8

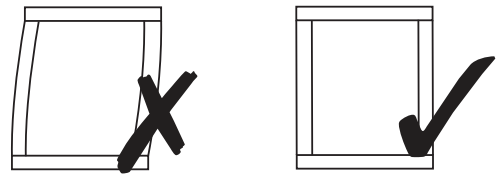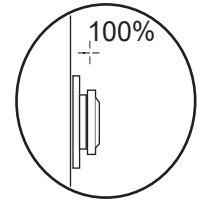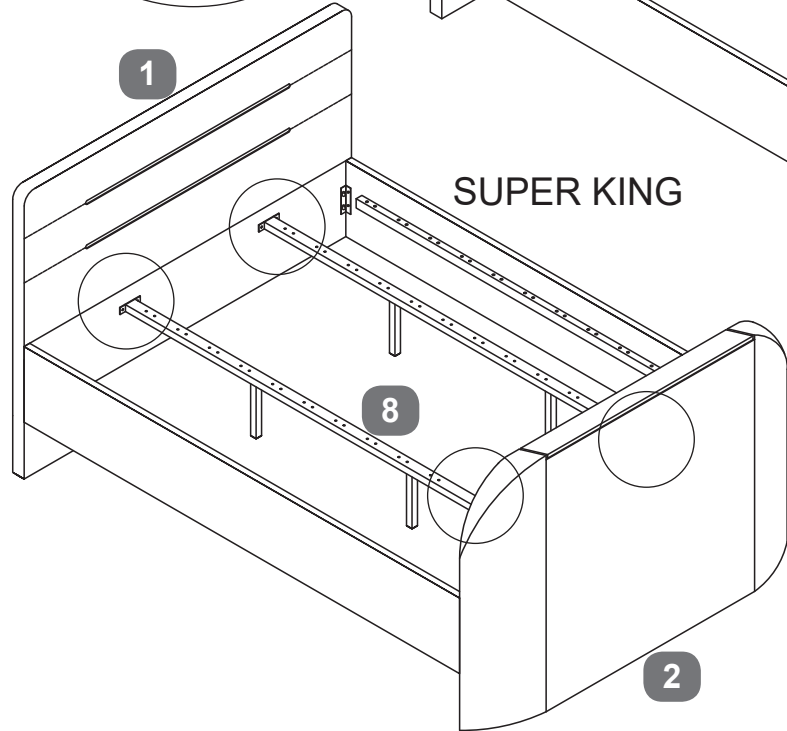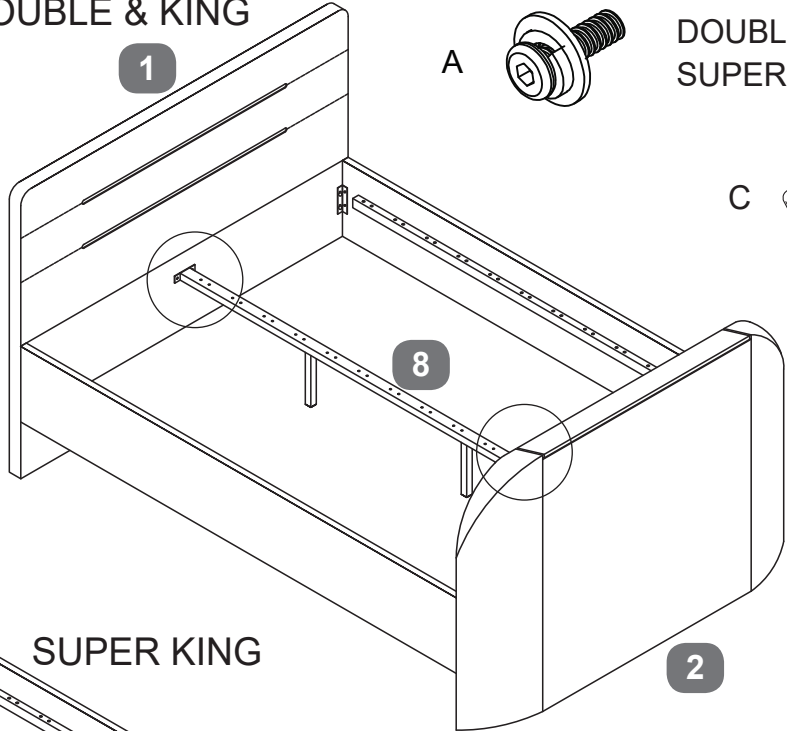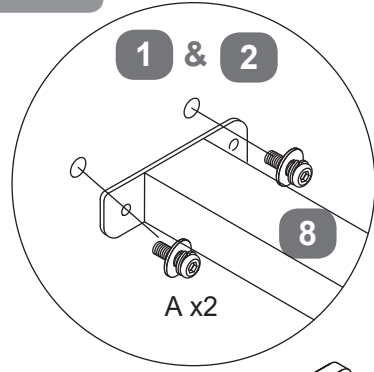


N.B. SQUARE UP THE BED AND THEN TIGHTEN ALL BOLTS 100%

 Stage
5

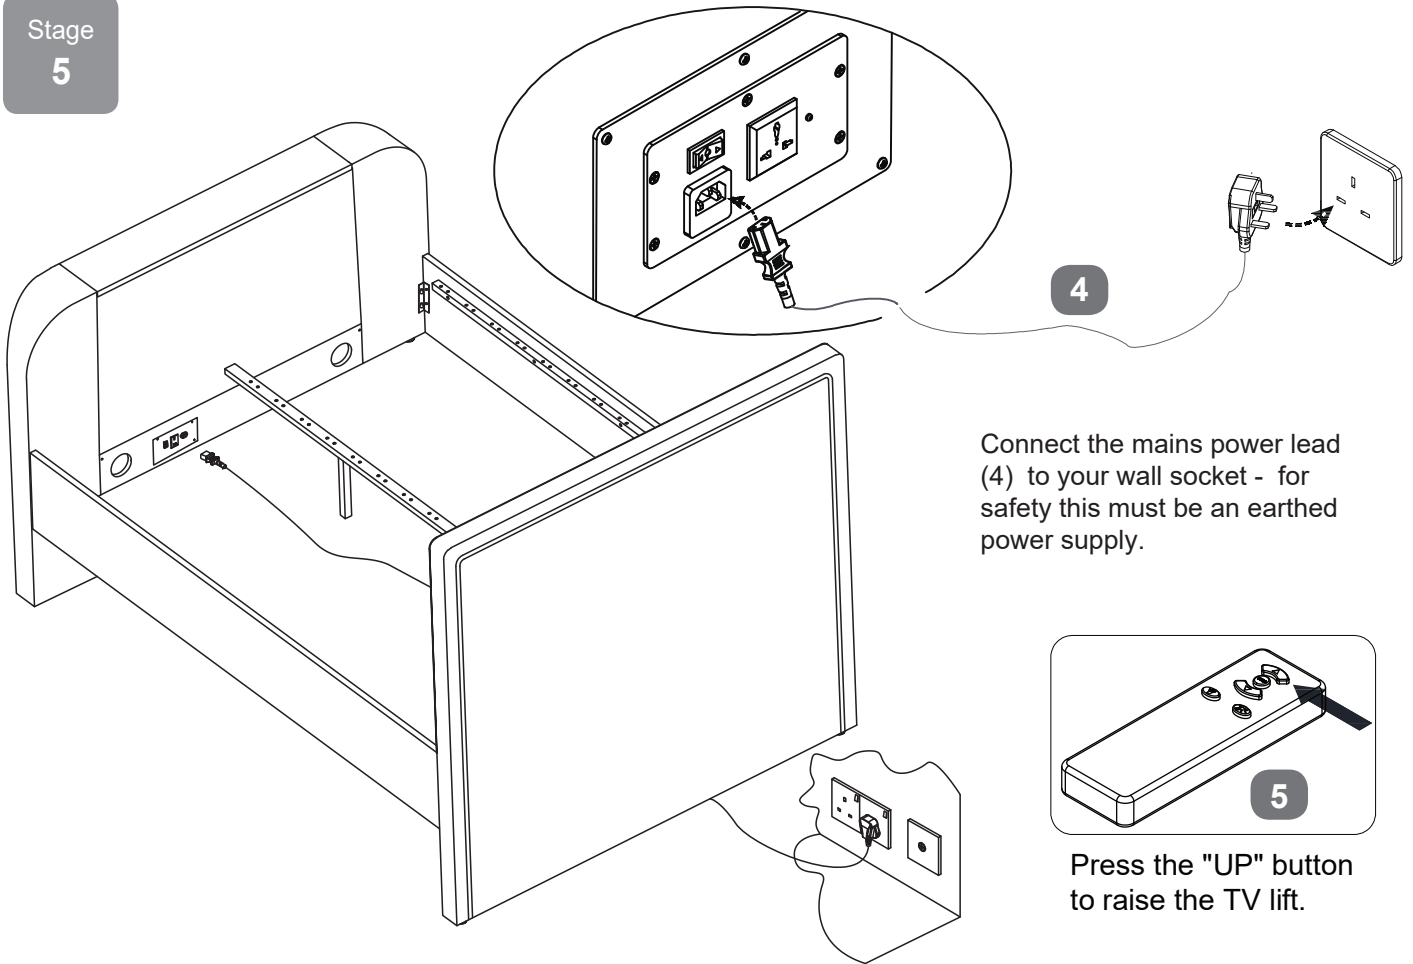

 Connect the mains power lead (4) to your wall socket - for safety this must be an earthed power supply.

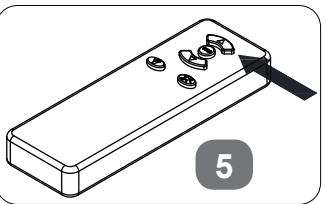


Press the "UP" button to raise the TV lift.

Stage
6



TIP:
BEFORE FITTING THE TV, PUSH CABLES THROUGH EACH DUCT FROM THE TOP. CHOOSE THE BEST SIDE TO USE DEPENDING ON WHERE THE CONNECTION PORTS ARE ON BACK OF YOUR TV. NEVER CROSS CABLES FROM ONE SIDE TO THE OTHER.







 
Note: For illustration purposes only, TV connections may vary.

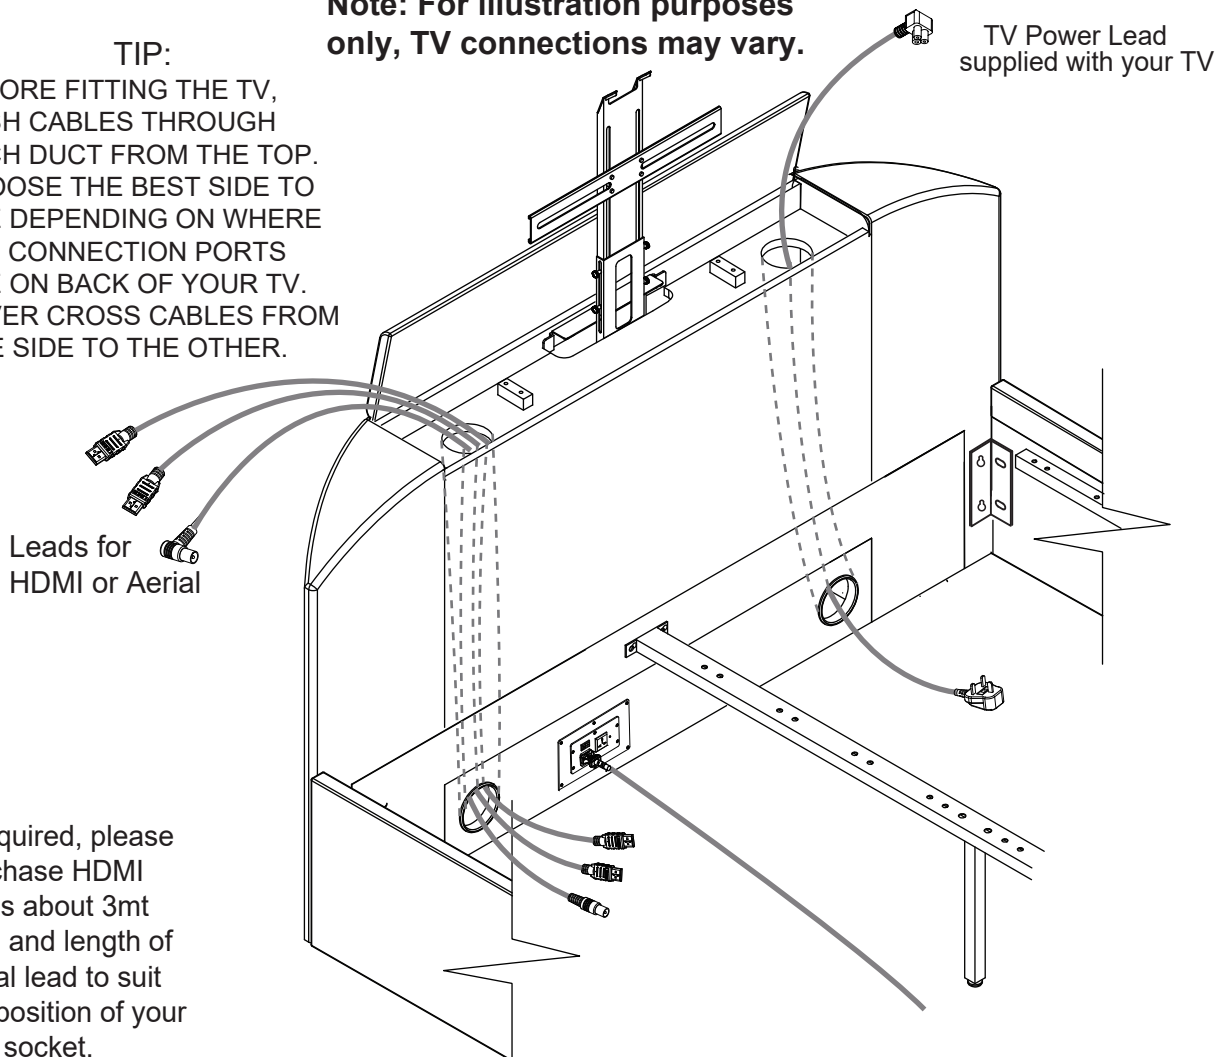

If required, please purchase HDMI leads about 3m long and length of aerial lead to suit the position of your wall socket.




 
TV INSTALLATION KIT

       - a Screw-Washer set (M8/M6/M4)  x2
- b Allen Key (5mm/4mm/2.5mm)  x1

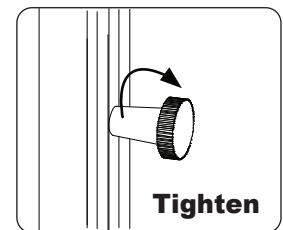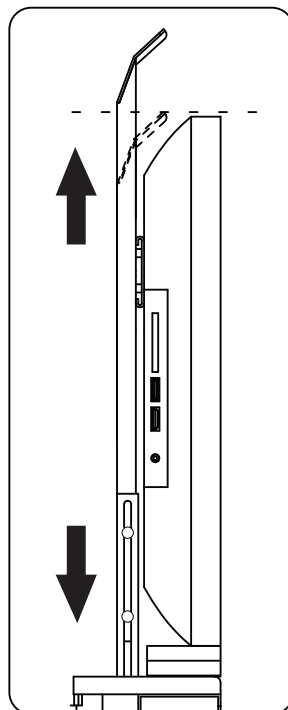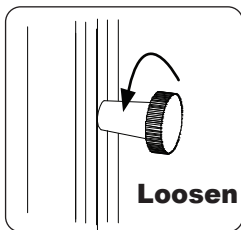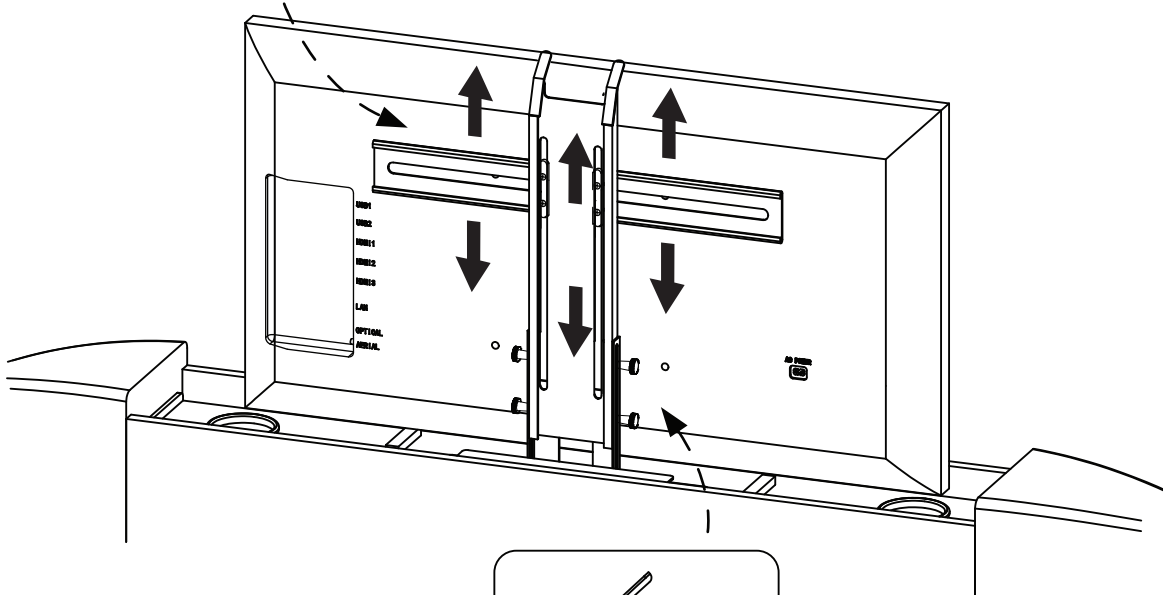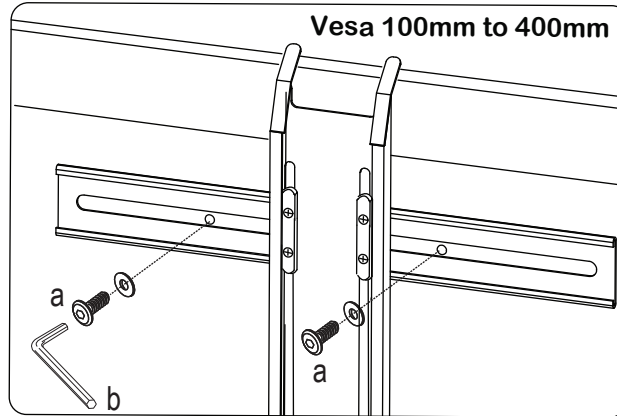
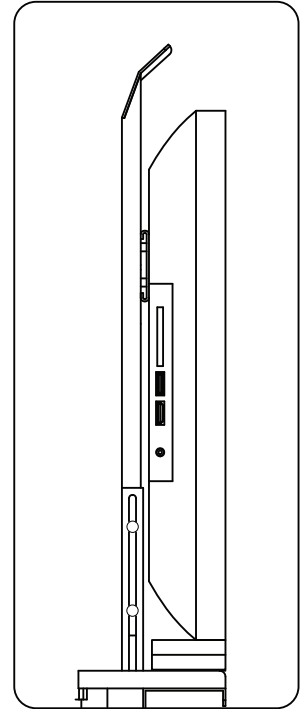


Note: For illustration purposes only, TV connections may vary.

    TV power lead supplied
with your own TV

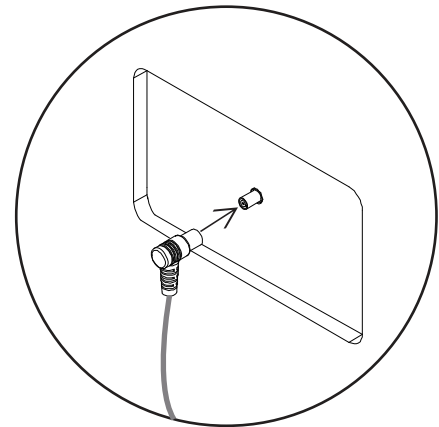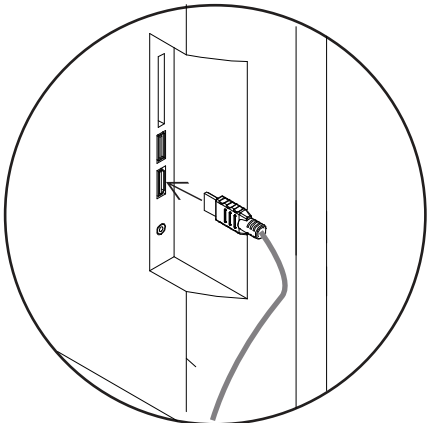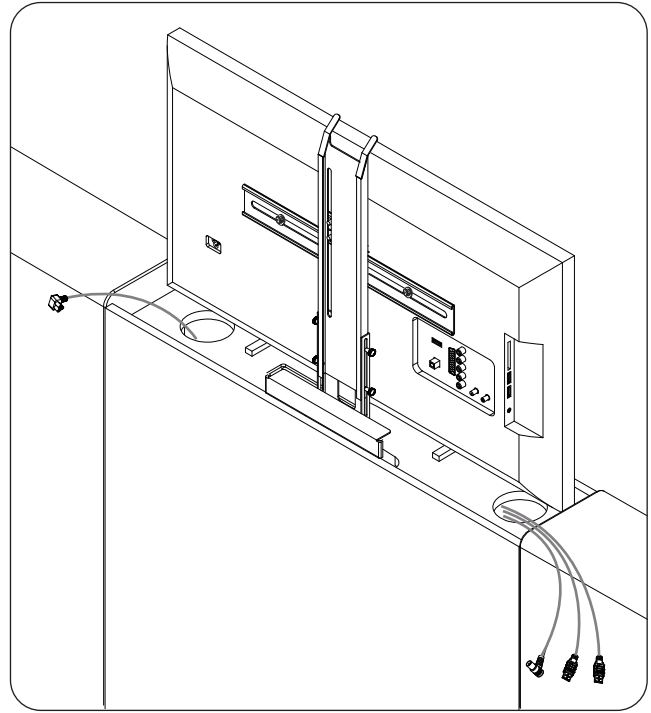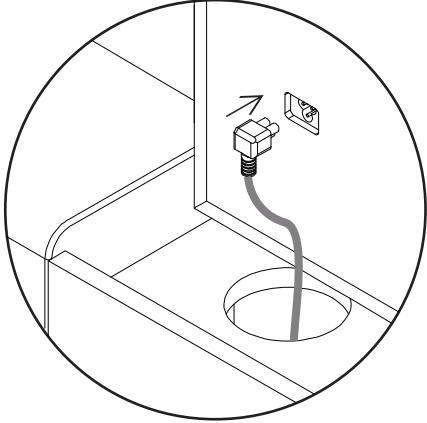


**PLUG IN - KEEP ALL CABLES TIGHT
- USE CLIPS & TIES PROVIDED.**

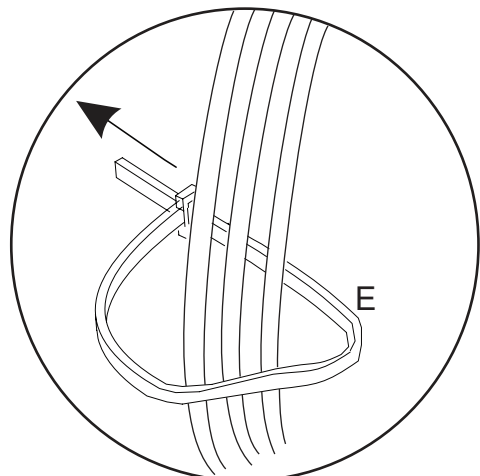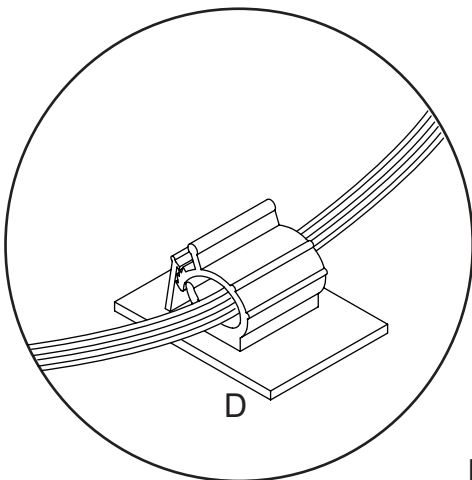  

Keep wires tight - peel
off cover from cable clips
& adhere to back of TV.

 Stage
9

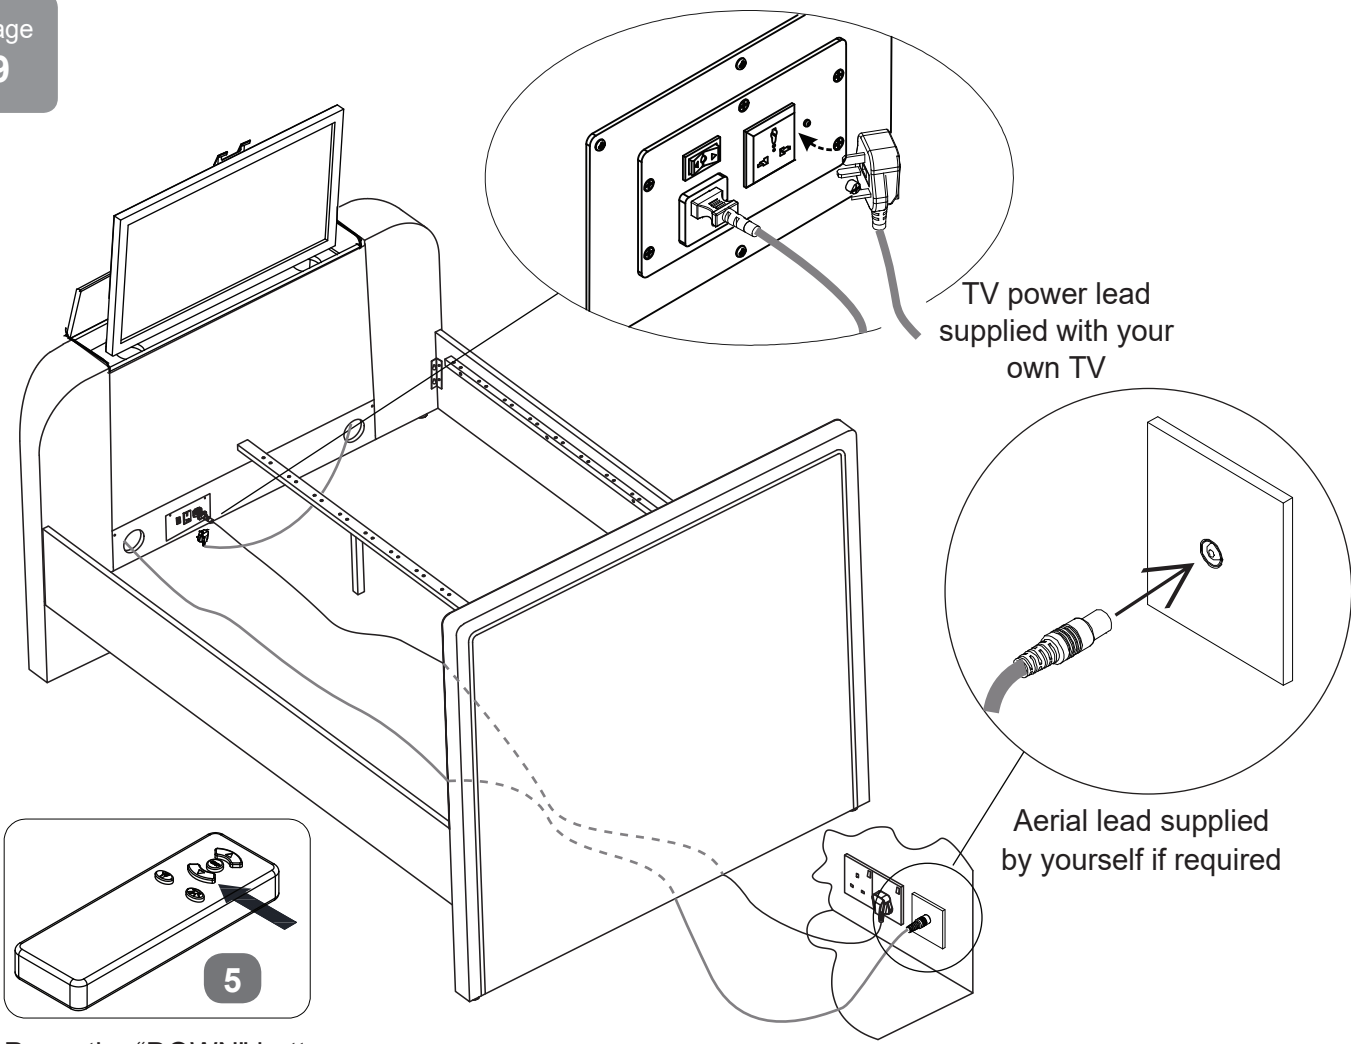


TV power lead supplied with your own TV

Aerial lead supplied by yourself if required

Press the "DOWN" button to lower the TV lift.

 Stage
10

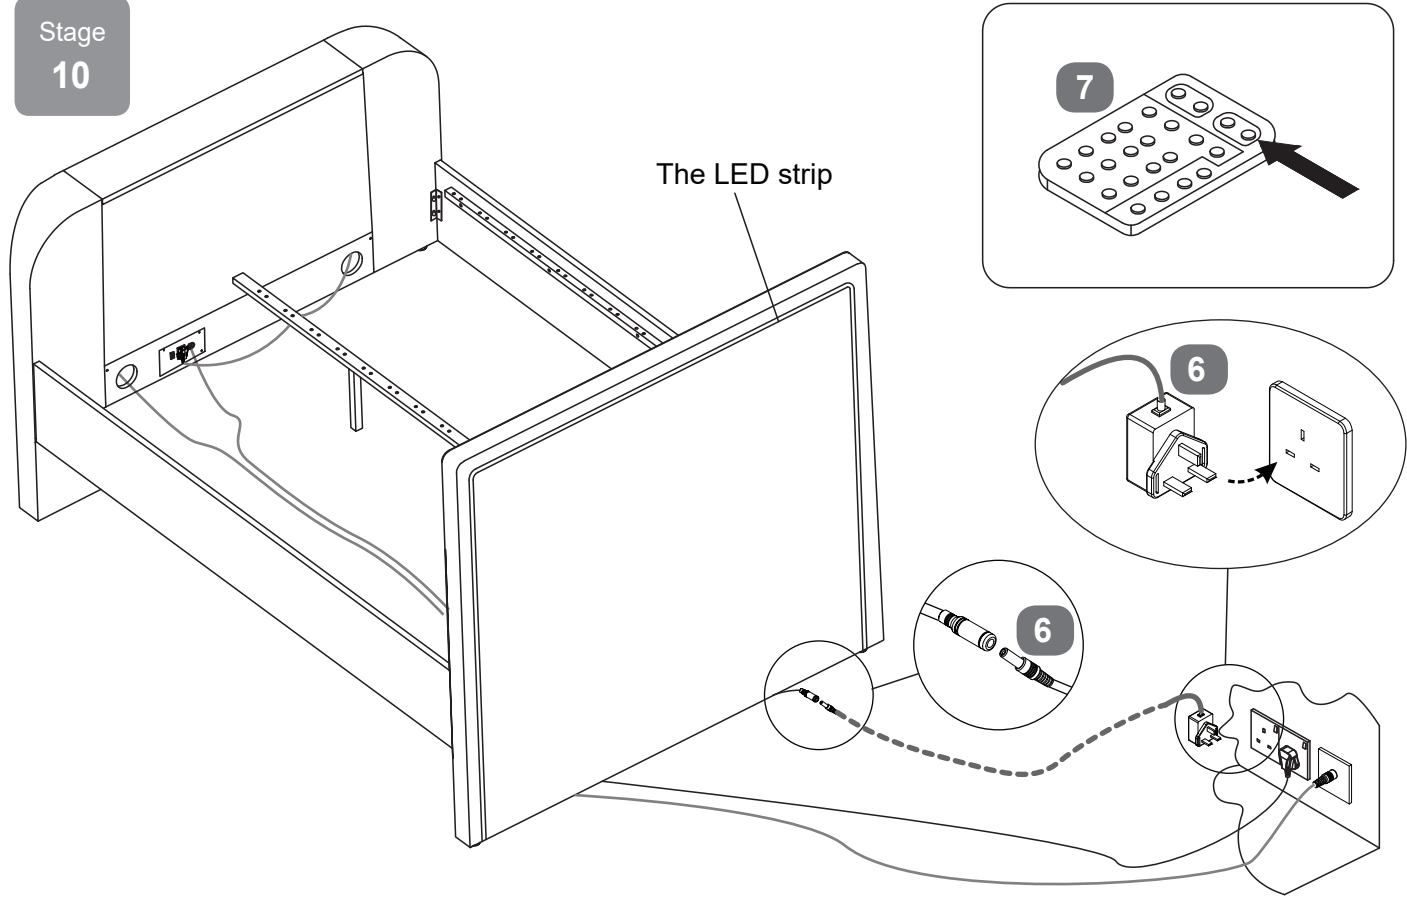




The LED strip

7


6

6

   
Double & King

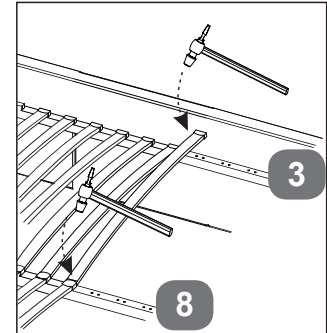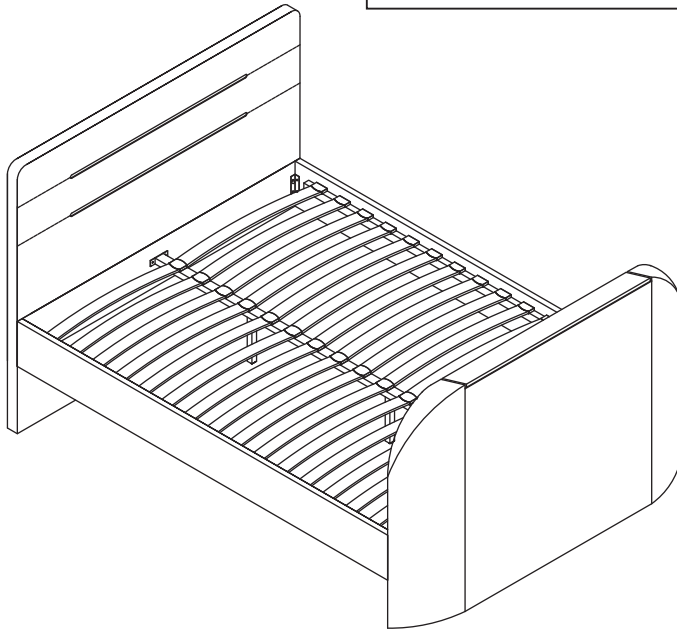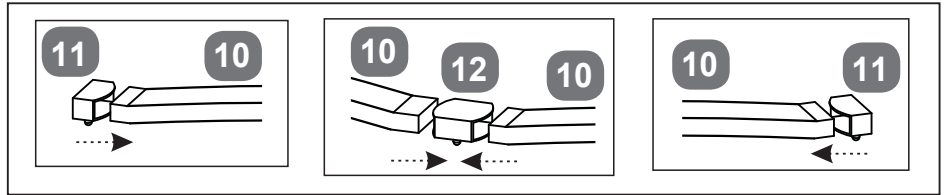

 Fix slats (10) to double plastic cap (12) on one end, fix single caps (11) to each end, then connect onto centre support bar (8) & metal support rails of side rails (3) by gently tapping lugs down into the holes.

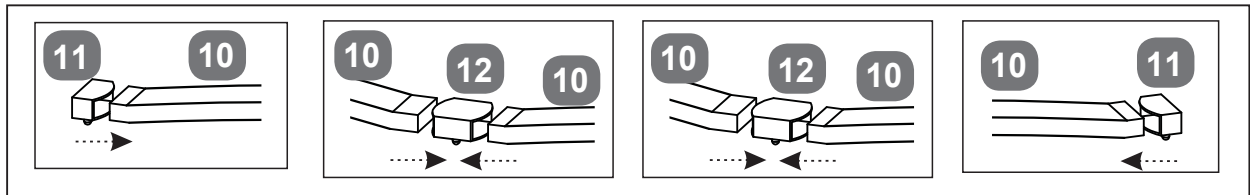

Super-King

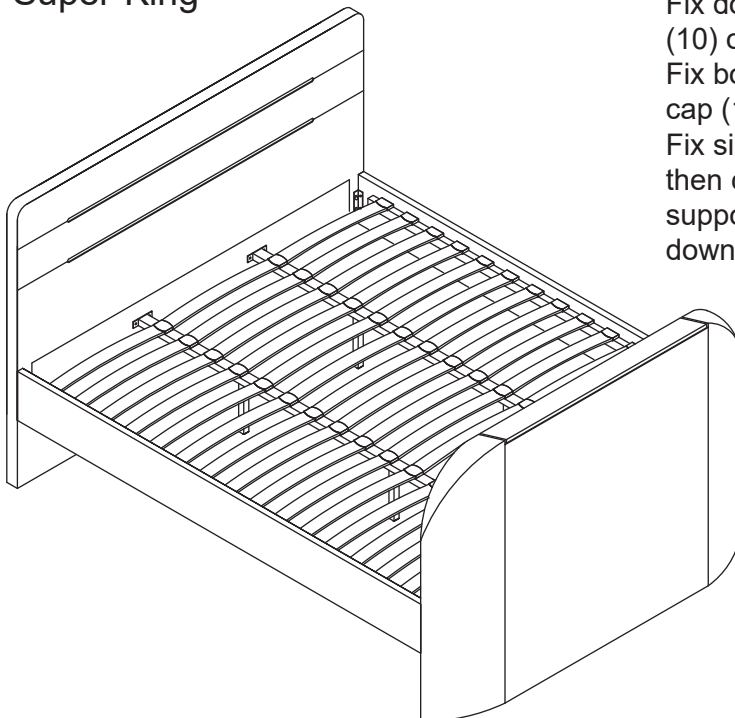 

Fix double plastic cap (12) to centre group slats (10) on both ends.
 Fix both side groups slats (10) onto double plastic cap (12).
 Fix single caps (11) to each end of side group slats. then connect onto centre support bar (8) & metal support rails of side rails (3) by gently tapping lugs down into the holes.

Technical Specifications

Max TV Size: 980 x 570 x 80 (WHDmm)

Overall Dimensions (LWH mm)

Double: 2200 x 1430 x 1100

King: 2300 x 1580 x 1100

Super King: 2300 x 1880 x 1100

Internal Dimensions (LWH mm)

Double: 1930 x 1380

King: 2030 x 1530

Super King: 2030 x 1830

Distance between slats (mm)

Double: 75

 
King & Super King: 73

Slat Dimensions (mm)

Double: 685 x 53 x 9

King: 760 x 53 x 9

Super King: 606 x 53 x 9

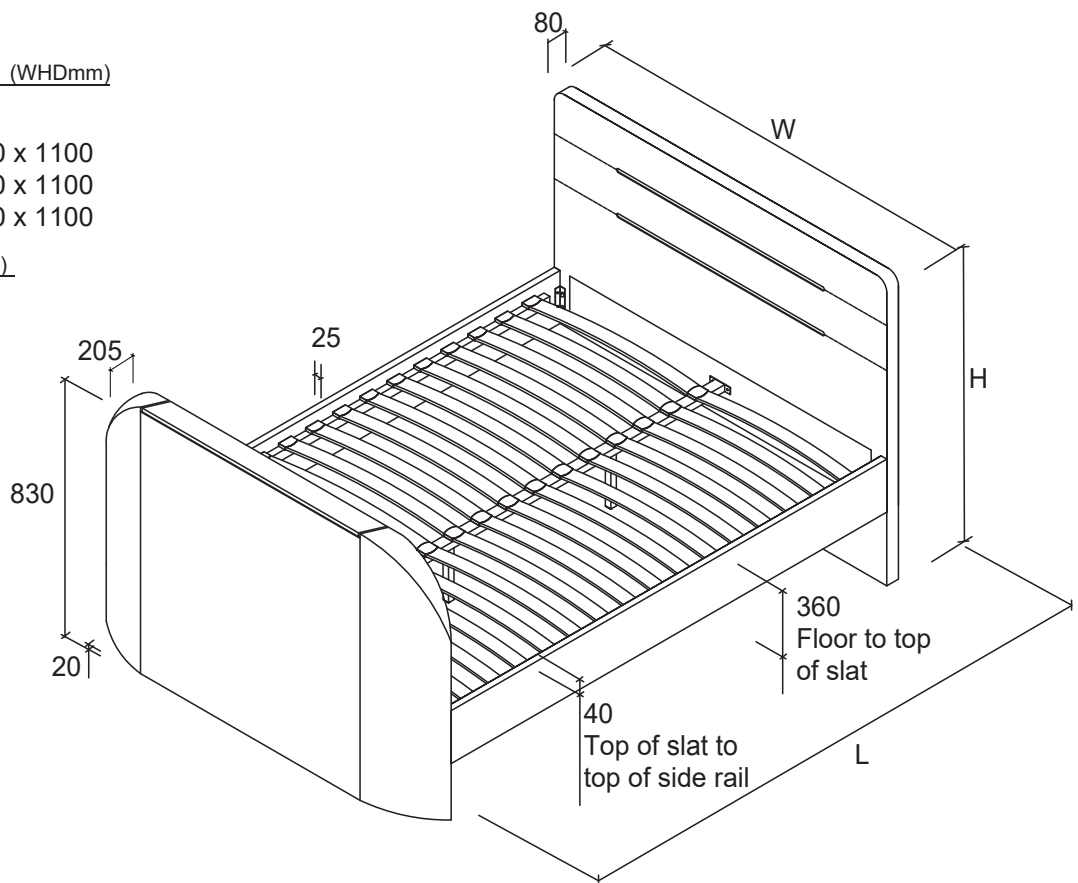

IMPORTANT POWER INFORMATION

Before fixing the slats to the bed, please follow the instructions below:

Plug in the main power supply lead supplied with your bed; this is packed inside the TV footboard Pack.

It is essential that this power lead is connected to an earthed socket be it a wall socket or extension lead - otherwise there is risk of damage or even electric-shock.

The wall socket providing the power must be accessible at all times in case you need to switch off the electric supply.

Power cable supplied with this bed or other approved mains powered extension leads used to power your equipment must not be placed where they can be walked on - this is dangerous and could lead to accidents.

Power outlets, extension leads or adapters must not be overloaded beyond their limit - this can result in fire or electric shock.

During an electrical or lightning storm - disconnect the power completely as a precaution.

Always un-plug the power when going on holiday or when the bed is not used for an extended period.

If you have young children in the home always disconnect the power at the wall socket for extra safety.

Do not interfere with or modify any cables already fitted and do not add any media cables unless they are routed through the ducts as shown. All leads must be tightly connected to back of TV, never hanging loose where they can get trapped.

Never touch moving parts or any part of the equipment - if something needs to be checked, disconnect the power first.

Do not insert anything into the footboard as this could seriously damage the TV and/or the TV lifting equipment and could, if done carelessly, cause serious damage or injury.

If the equipment doesn't operate normally or if there is any unusual noises, disconnect the power and contact your retailer for advice.

TELEVISION INFORMATION

Please follow the assembly steps for initial operation of the TV Lift, fitting your TV and any media cables required.

Push the television power plug (supplied with your own TV), into it's own special socket which is on the face of the footboard clearly shown in the instructions. For safety and to prevent overheating, this socket is only to be used for the television as it does not have a constant power supply.

Raise the TV Lift by pressing the UP button of the remote control.

If required you can connect media cables to the television ports.

Please use the cable clips & cable ties to make certain there are no loose wires to snag or get trapped.

The television can now be operated following the TV User Guide.

When finished viewing, lower the television back into the footboard by pressing the DOWN button of the remote control.

For safety and to stop any overheating, power to the television is switched off when lift reaches the bottom rest position.

When the UP button is pressed - the TV Lifting Column rises and power is turned back on automatically.

TROUBLE SHOOTING

- If your equipment does not operate please check all the electrical connections to the wall socket and check that electricity is reaching the main power input plug bringing power to the footboard.
- Make sure that the TV is switched on - but note that the television will only work when it is in the up position.
- Check that the remote control has not lost its connection with the TV Lift - please see pairing instructions on Page (2).

IMPORTANT: Care should be taken when connecting electrical items. If you are in any doubt about the connections please consult an approved electrician. If you still have a problem please contact your retailer for advice.