## **ASSEMBLY INSTRUCTION FOR** 5-6688-MSR-BW-80"

Note:

Read Instructions carefully.

Carefully identify each component especially those that are similar.


Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

Do not over tighten the screws or botts when assembline.








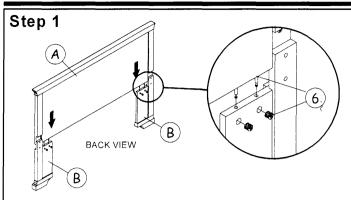


Fix head bottom leg left & right tio the head board top with minifix '6' as shown.

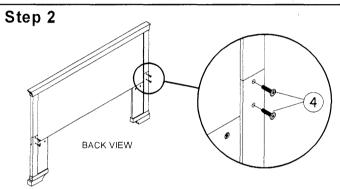


Fix bolts '4' to the headboard top and head bottom leg as shown.

## Step 3

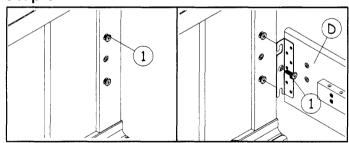


Fix bolts '1' (upper & lower bolts) into position on wood leg as show. After that hook the side rail to the bolt and fix center bolts '1' as shown.


Important note: Do not tighten the bolts yet!

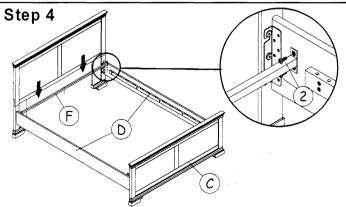


Fix cross bar 'F' to the side rail with bolts '2' as shown.

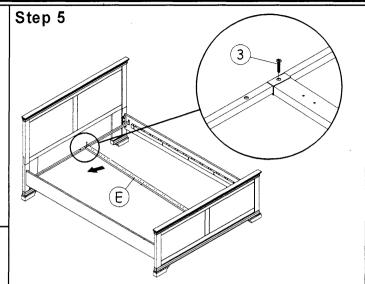

Fix center bar 'E' to the cross bar 'F' with bolts '3' as shown.

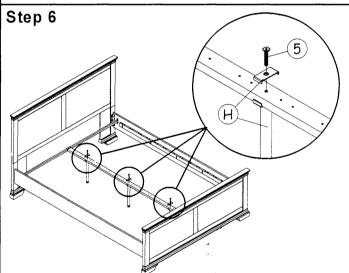

Fix bed support legs as shown and tighten all bolts.

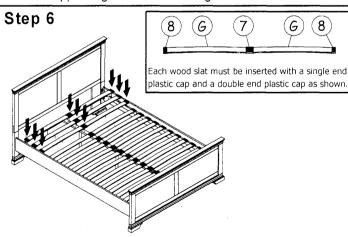

Once both wood slats have been inserted with the plastic caps, fix it on the wood side rails and center bar by pressing it accordingly to the default holes. Ensure the plastic cap's pin is aimed to the hole.

Please follow our assembly instruction procedure for easier assemble.

## PARTS & HARDWARE LIST FOR 5-6688-MSR-BW-80"

NO.	PART	QTY.	NO.	HARDWARE	QTY.
A		1 PC	1	JCBC BOLT M8 x 25mm	12 PCS
	HEAD BOARD TOP	·	2	JCBC BOLT M6 x 15mm	8 PCS
В	HEAD BOTTOM LEG - L/R	2 PCS	3	JCBC BOLT M6 x 30mm	2 PCS
С		1 PC	4	JCB BOLT M8 x 30mm	4 PCS
	FOOTBOARD		5	JCBC BOLT M8 x 40mm (ASSEMBLED)	3 PCS
D	SIDE RAIL	2 PCS	6	MINIFIX	4 PCS
E	CENTER BAR	1 PC	7	DOUBLE END PLASTIC CAP	14 PCS
F	CROSS BAR	2 PCS	8	SINGLE END PLASTIC CAP	28 PCS
G	WOOD SLAT	28 PCS	9	ALLEN KEY - M6	1 PC
Н	SUPPORT LEG	3 PCS	10	ALLEN KEY - M8	1 PC

Page 2 / 2 Prepared by Hisham