

ASSEMBLY INSTRUCTION


Step 2: Attach side rail (C) to footboard (B) and headboard (A) by pushing the bracket down to fit it.

MODEL: CF 9499-A (5')

Step 1: Install the legs (D) to footboard (B).

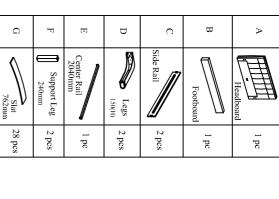

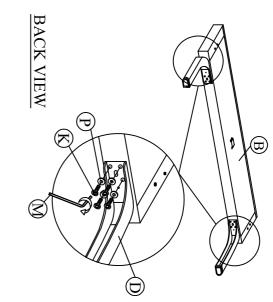

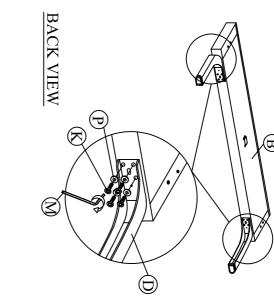


Step 3: Attach the support legs (F) to the center rail (E) of the bed as shown.

Ξ

Middle Holder

End Holder

28 pcs

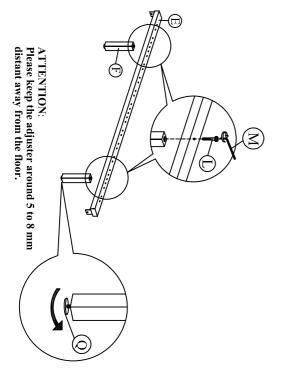

0

2 pcs

Flat Washer

0

8 pcs

Small Adjuster

0

CSK M4 x 25mm

2 pcs

 \mathbf{z}

1 pc

 \leq

1 pc

JCBC M6 X 40

2 pcs


JCBC M6 X 20


8 pcs

JCBB M8 X 20

8 pcs

Step 4 : Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (O) using screw driver (not included) to the headboard (A) and footboard (B).

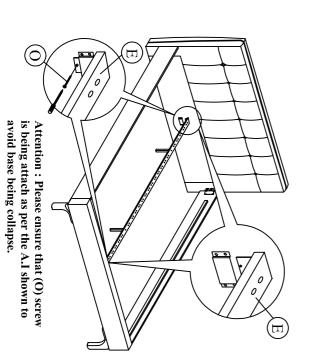

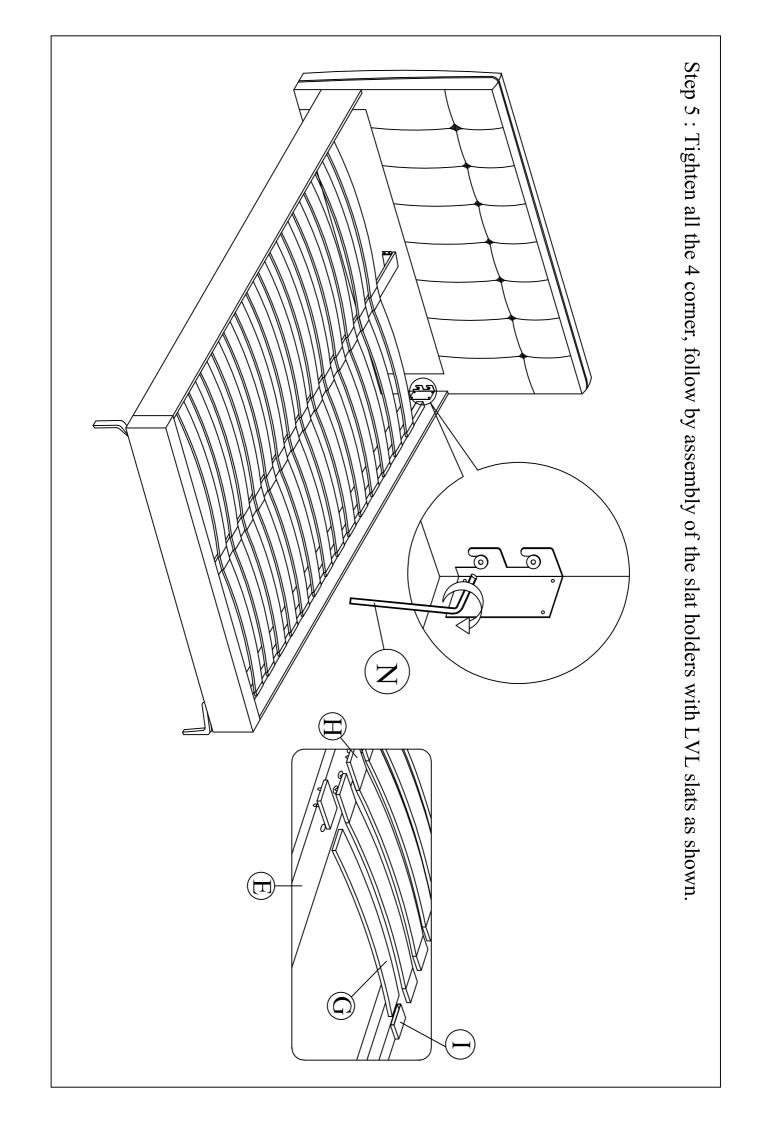

Important Information

Please note that the recommended process for adjusting centre legs when assembling your bed.

Before placing the mattress on the base, please ensure that the <u>SUPPORT LEGS</u> <u>ARE NOT QUITE TOUCHING THE FLOOR</u>. When the bed is then in use the support legs will sit firmly on the solid surface.

PLEASE ENSURE THAT THE LEGS ARE VERTICAL.

DUE TO THE NATURE OF LAMINATE / WOODEN FLOORING WE RECOMMEND THAT YOU PLACE A SMALL PIECE OF NON SLIP MATERIAL UNDER THE LEGS WHICH WILL GIVE YOU THE FLEXIBILITY THE ADJUSTERS NEED.

When moving the bed it is essential that it is <u>LIFTED</u> into the new position. <u>NEVER DRAG</u> the bed as this will move the legs from the vertical position thus weakening the support of the centre rail.

Adhering to the recommended process should ensure that your bed gives you years of trouble free service.