






Attach white nail legs to part 1,2,3R and 3L using hammer

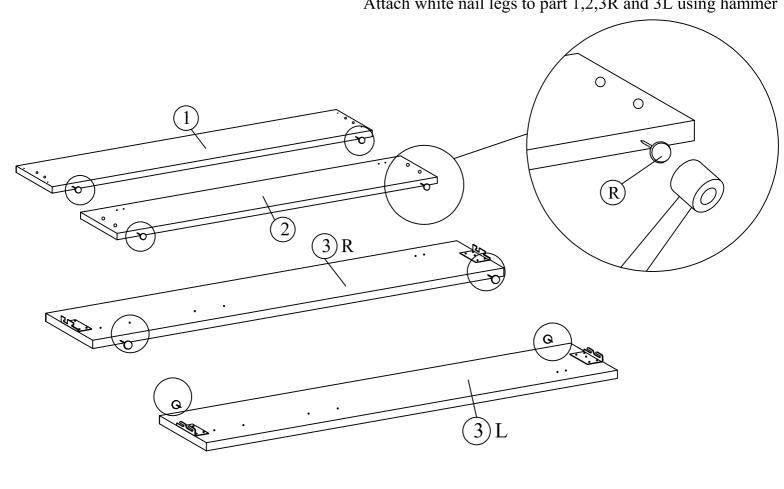

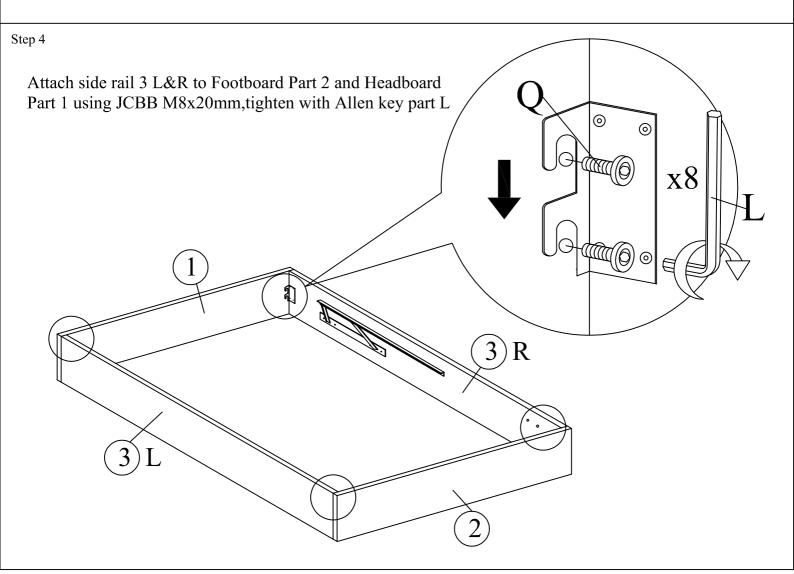

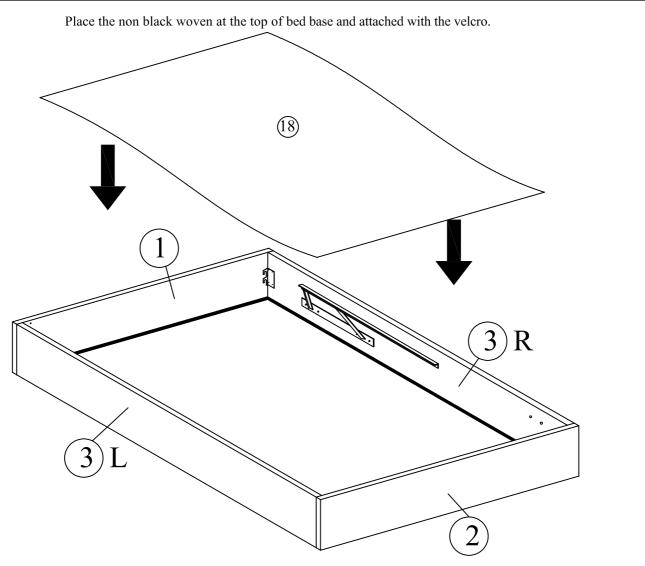


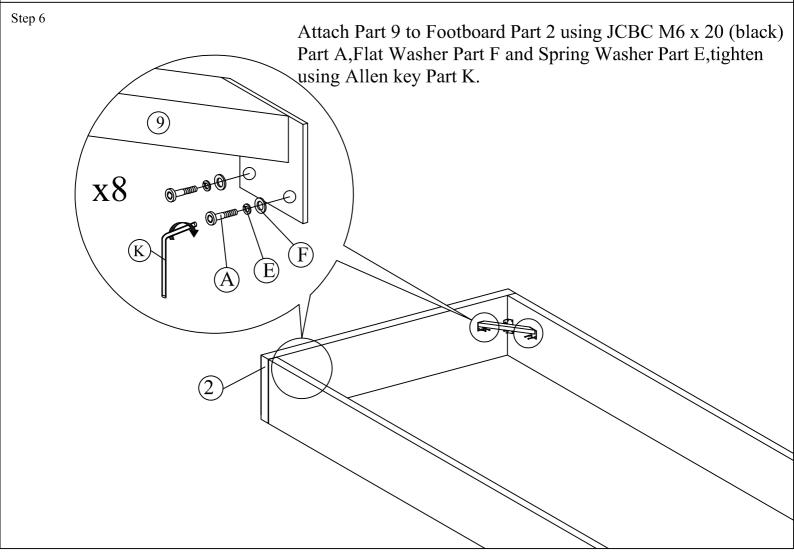


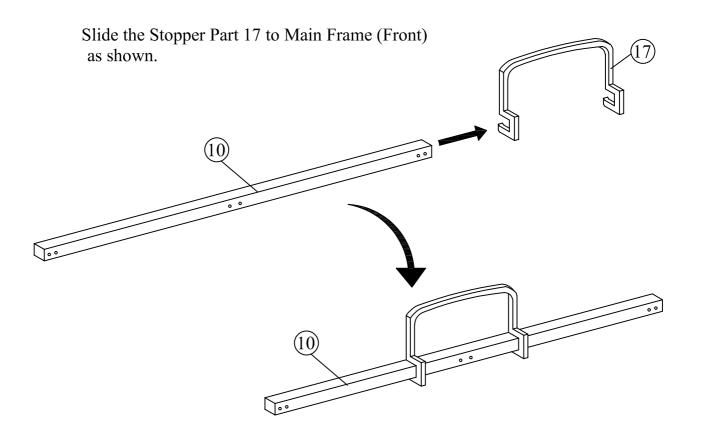


Step 8


Hole for bolt between first & second pair of holders' hole to be fixed to headboard end.

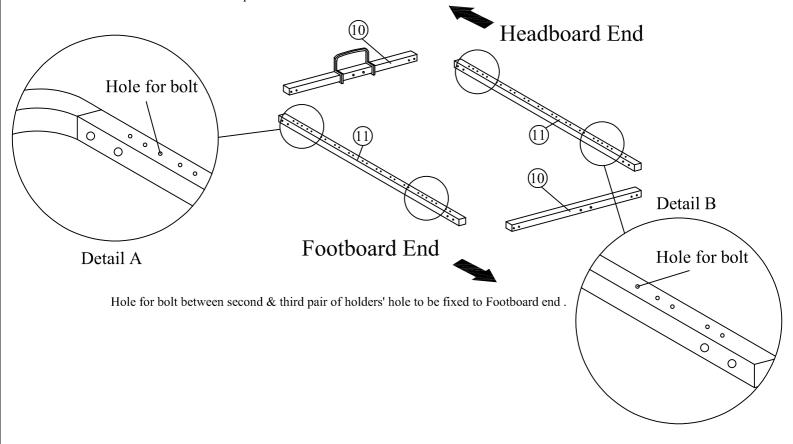

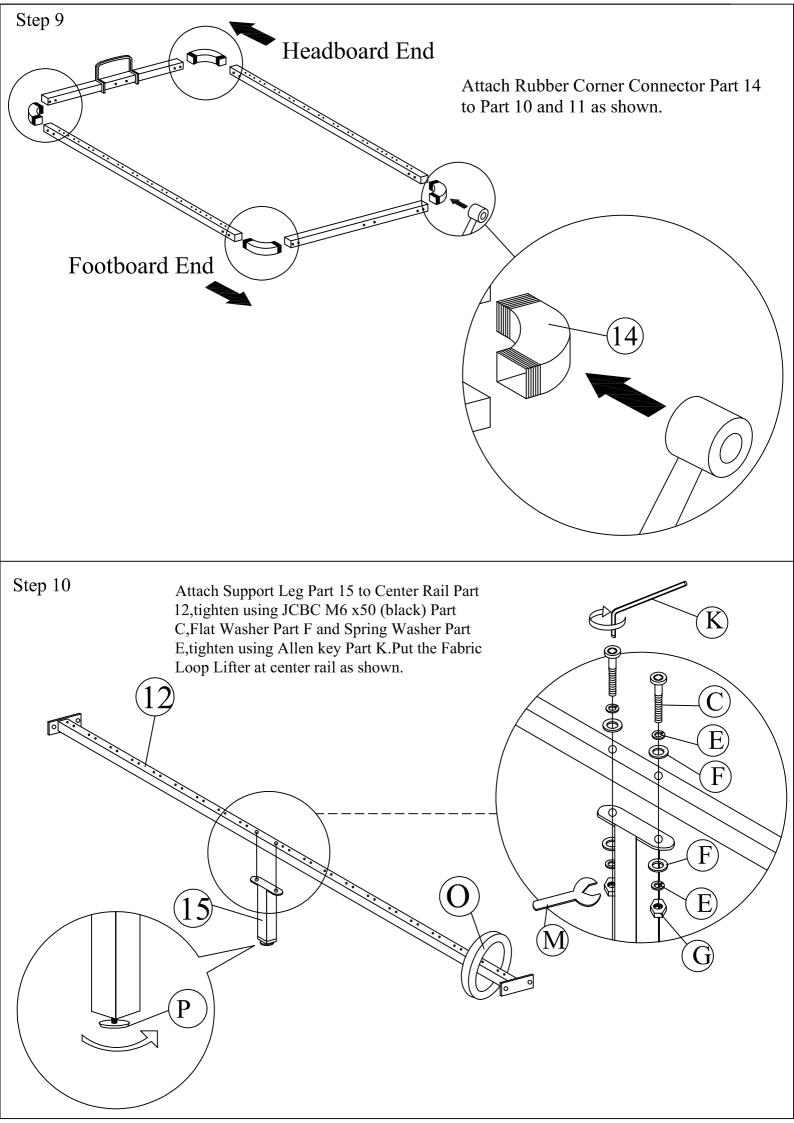


Attach Center Rail Part 12 to metal frame and tighten using JCBB M8 x50 (black) Part D,Flat Washer Part I,Spring Washer Part H and Nut Part J.Tighten using Allen key Part L and Spanner Part N.

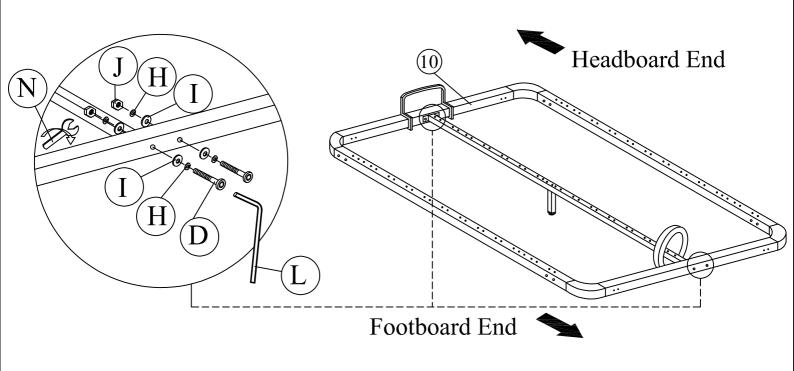

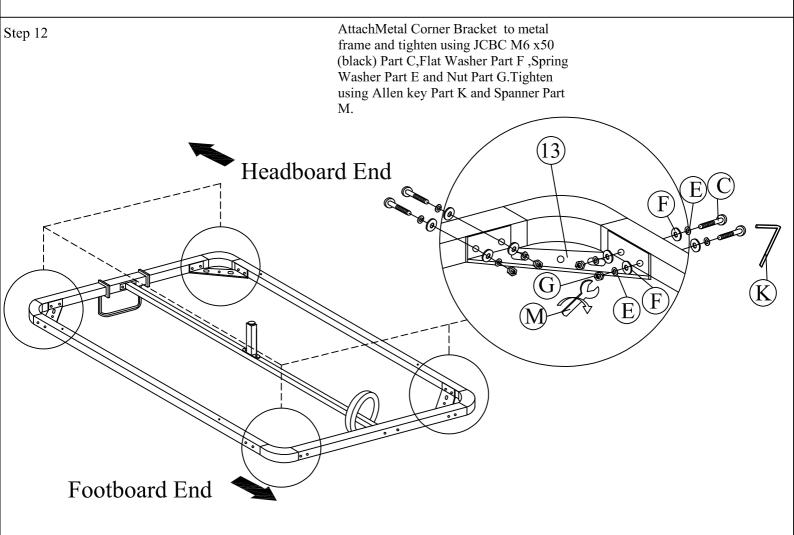


Step 13

Fit Slat Holders (4) first & attach to outside rail, then fit slat holders (5) and attach to center rail (Note: fit 4 first then 5)

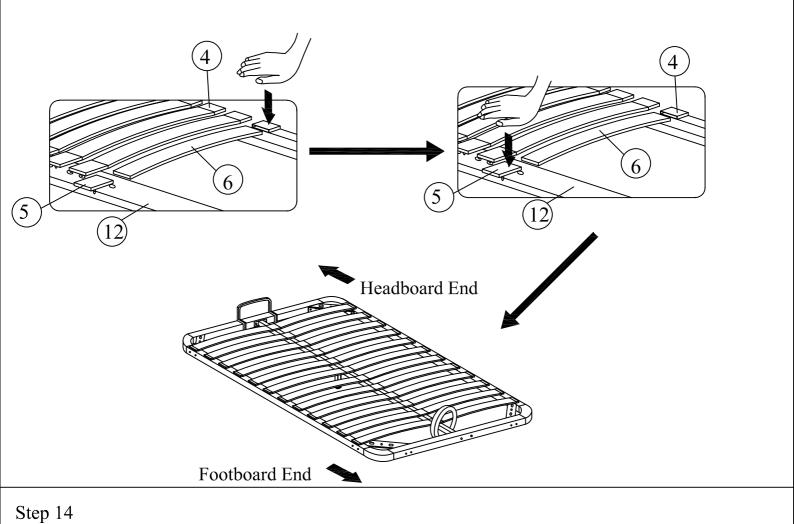


Headboard End

Footboard End

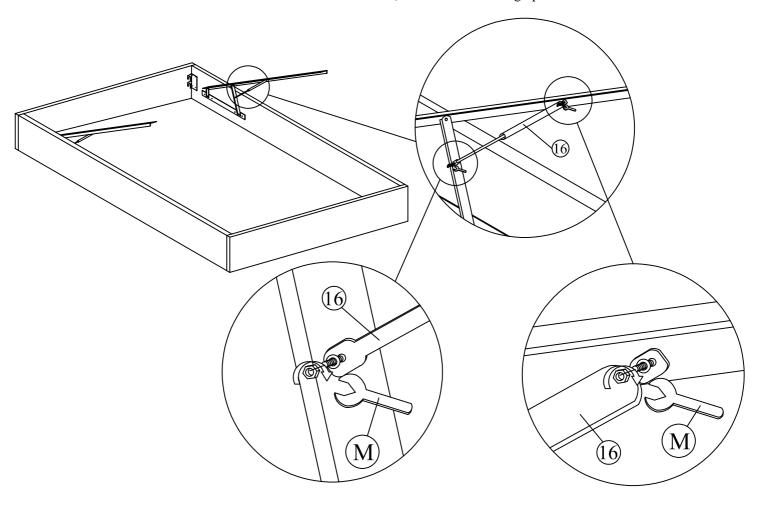

Step 16

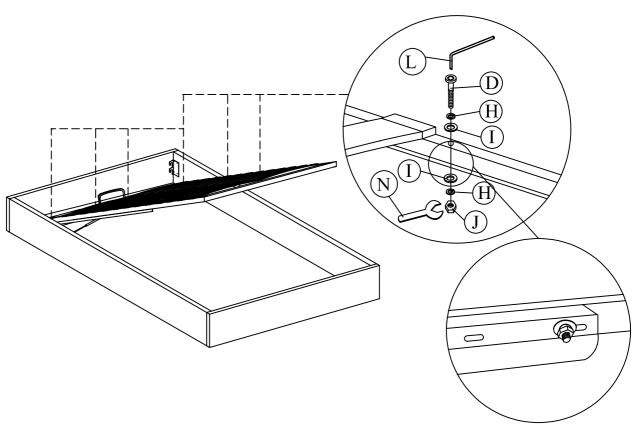

Caution: Adjust the screw at the position of the long hole as shown, then tighten the screw!

Additional Information:

- Caution. This bed uses a pressurised mechanism.
- Use caution when operating Always use two hands at arm's length, and only where illustrated on the product.
- You must ensure the mattress is on the bed frame before lifting the mechanism Failure to do so may result in injury.
- Please ensure Children and pets are kept away from the bed when operating the bed mechanism.
- If removing the mattress, make sure that the frame is secured as it could flip open.
- Only use the storage compartment when the frame is fully raised in the 'up' position.
- No children and animals are left unattended when the frame is in the 'up' position.
- Do not remain on the bed whilst the lifting mechanism is in use.
- •Beware of Entrapment Keep both hands clear of mechanism when operating the mechanism.
- When lifting the bed remove all bedding Except the fitted sheet.



